





## In-Line RF Remote Controller Additional Instructions

If the controller fails to respond to inputs from the remote control the remote may need to be paired.

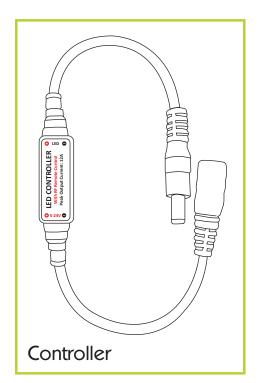

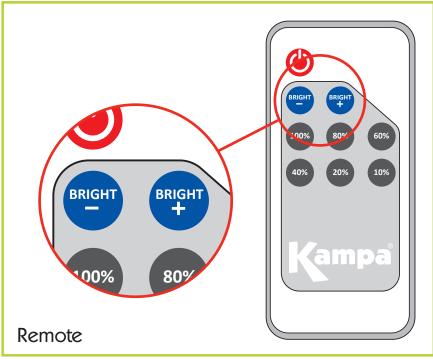

## **Pairing Instructions**

The remote may need to be paired to the controller before first use. Connect the controller to the power source and to the SabreLink light, then press the blue coloured Bright - and Bright + buttons simultaneously. The remote will broadcast a pairing signal and any controllers within range will now respond to the remote. Multiple controllers can respond to a single remote, so if you wish to use multiple controllers independently you must first unplug the power from all of the controllers except for the one that you wish to pair.

If the remote does not work please check the condition of the battery. The red light, on the remote, should be bright when any of the buttons are pressed. Replace with a 3V CR2025 battery.

SABRE-UM-ADD-0416-Rev.B